

Soft n Shine™ Instructions

Before the first use:

Read the instructions completely.

Soak the Soft n Shine™ for 20 minutes in a saturated salt solution. This ensures that it is charged and ready to remove hard water minerals.


Before each use:

Inspect the Soft n Shine™ for any damage to the mesh or the housing. Any damage can allow the resin to escape, potentially clogging or harming your dishwasher. Do **NOT** use if you see damage.

Check for unusual smells or colors, trapped food particles could allow for unwanted bacterial growth. If you notice a strange smell or discoloration, follow the cleaning instructions. Do **NOT** use until you have cleaned the unit.

How to Use the Soft n Shine™:

It's important that the Soft n Shine™ be placed flat on the highest rack/shelf of the dishwasher that has sufficient water flow.

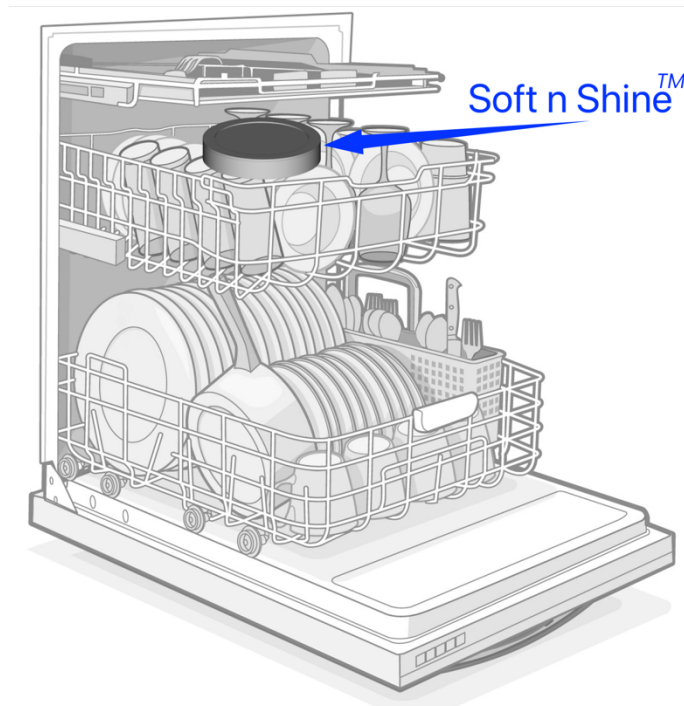

Do **NOT** place it on the lower rack, as heat from the drying coils may distort it during the drying process causing damage to the Soft n Shine™ unit.

For best results, store your Soft n Shine™ in the saltwater solution between uses. This keeps the unit recharged, its resin hydrated, and free of unwanted bacterial growth.

After each use:

- Check for and remove any food that may be left from the dishwashing cycle.
- Check for any damage to the Soft n Shine™ unit. Do **NOT** use if damaged.
- Check for any unusual smells or colors, if any of these appear, do **NOT** use the Soft n Shine™ until you have cleaned the unit.

Preparing the Salt Solution and Recharging the Soft n Shine™:

1. Find a lidded food container (i.e. Tupperware or Coolwhip) large enough to fit the Soft n Shine™.
2. Place the Soft n Shine™ into the container and add enough water to completely cover the Soft n Shine™.
3. Remove the Soft n Shine™ and put it aside
4. Add table salt to the water while stirring until no more salt will dissolve (about 1/3 cup of salt per cup of water).
5. Continue stirring and adding salt until about ½ inch of undissolved salt is left on the bottom.
6. Place the Soft n Shine™ into the container, making sure that it is fully submerged, and allow it to soak for 20 minutes. This will recharge the unit.
7. Remove the Soft n Shine™. Let any excess solution drip off back into the container. Put the lid on the container to save the salt solution for later use.
8. The Soft n Shine™ is now ready for use.

Remake the salt water solution if it appears dirty or when all the salt on the bottom has dissolved.

Keeping the Soft n Shine™ Clean:

Even though the device is placed into the dishwasher and "cleaned" every cycle, odors or discolorations on the Soft n Shine™ may be a sign of bacterial growth and should be addressed as follows.

- Remove any food particles that are visible on the unit, then place the Soft n Shine™ in a bath of 3% hydrogen peroxide for 30 minutes, then rinse clean in tap water.
- If problems still occur, boil the Soft n Shine™ for 15 minutes and soak for 30 minutes in a weak solution of bleach, then rinse clean in tap water.
- If the problem persists, do **NOT** use and contact us at admin@apt905.com.
- Recharge the Soft n Shine™ after cleaning.

Warranty:

The manufacturer warrants this product to be free from defects in workmanship and materials, under normal residential use and conditions, for a period of 90 days from the original shipping date. In no event shall our company be liable for any direct, indirect, punitive, incidental, special consequential damages, to property or life, whatsoever arising out of or connected with the use or misuse of our products. User accepts all risk of use.

Questions/Comments?

Contact us at admin@apt905.com if you have any questions or comments.